
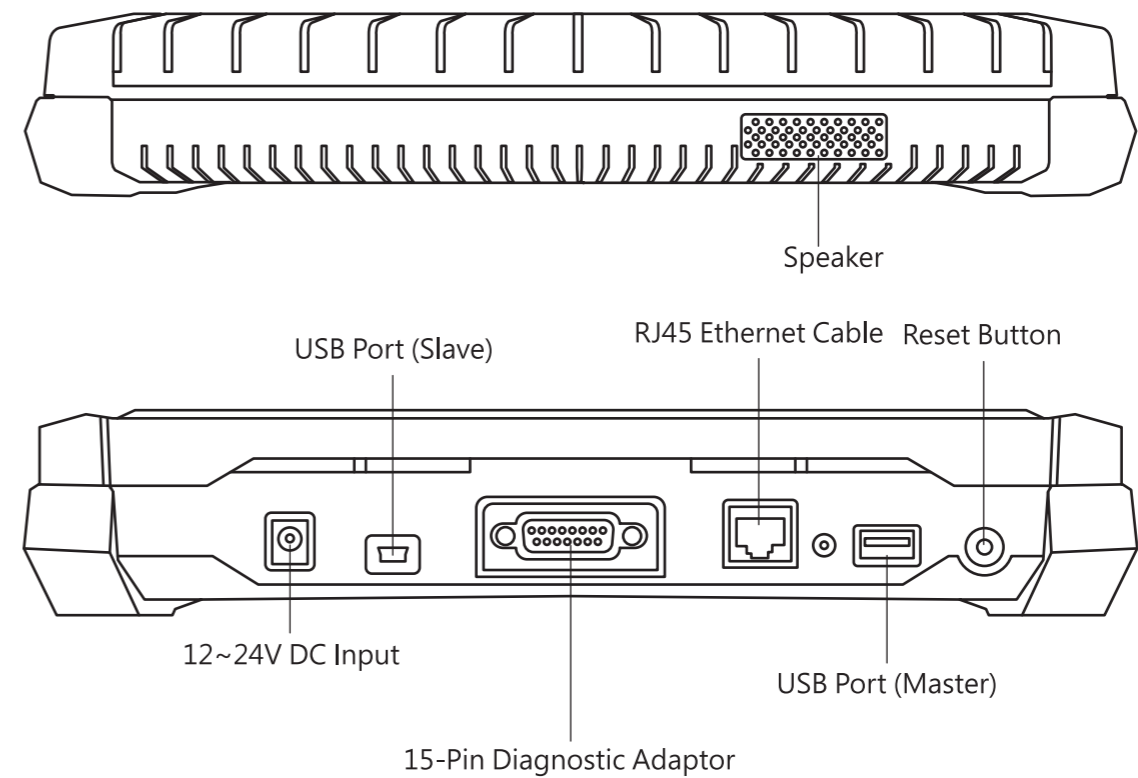


VEDIS 4sp Features Overview

VEDIS 4sp Hardware Features

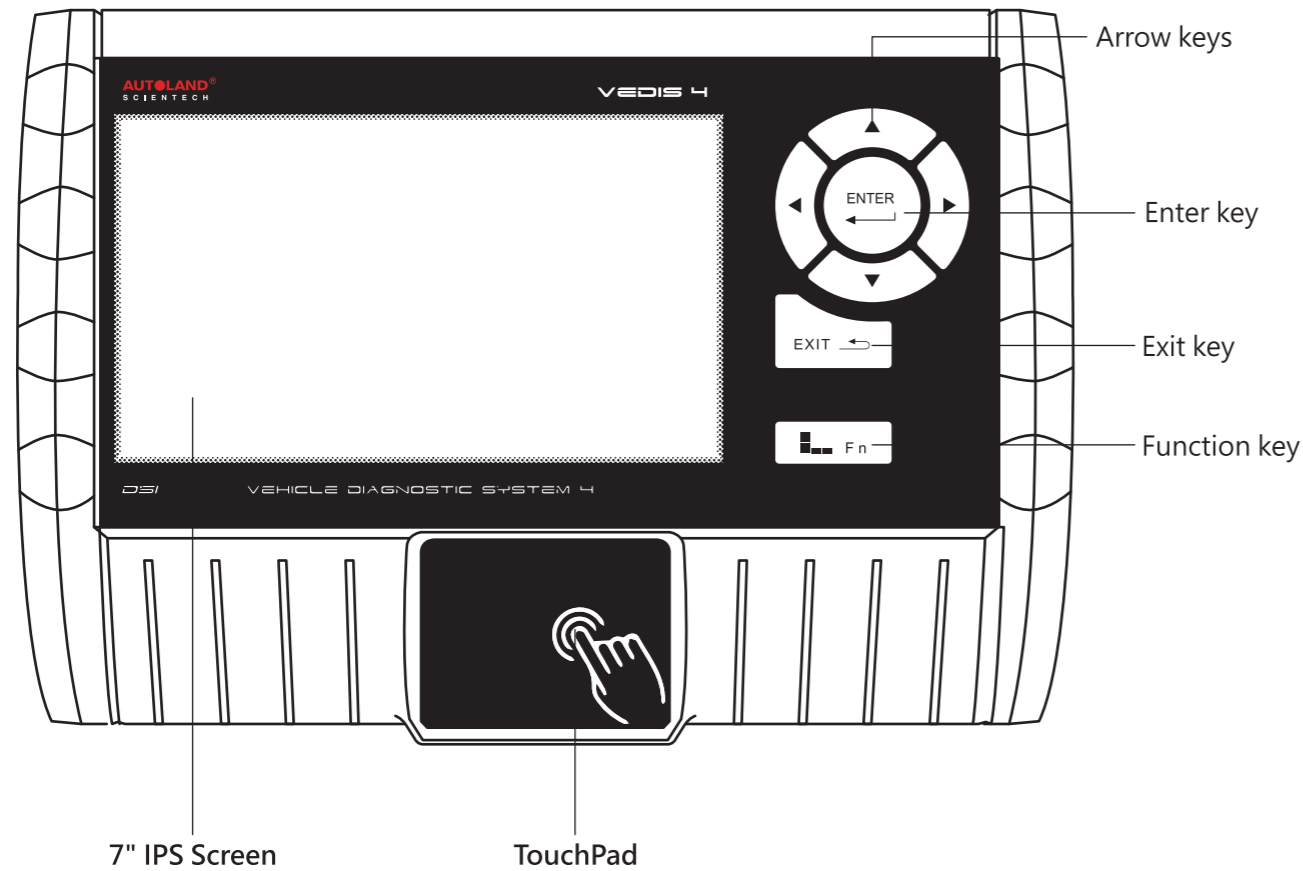


Quick Operational Guide

Step 1 Locate Vehicle Diagnostic Connector

For most vehicles, OBDII connector is located by the driver's seat under the dashboard. Some models may have a lid covering the connector.


Attention:

1. Vehicles manufactured before year of 2000 may be equipped with different connector, or require different connector for different systems. Ex. Toyota before year of 2000 installed the non-OBDII connector under engine hood.
2. Please use correct diagnostic adaptor to connect with vehicle, otherwise connection may fail.

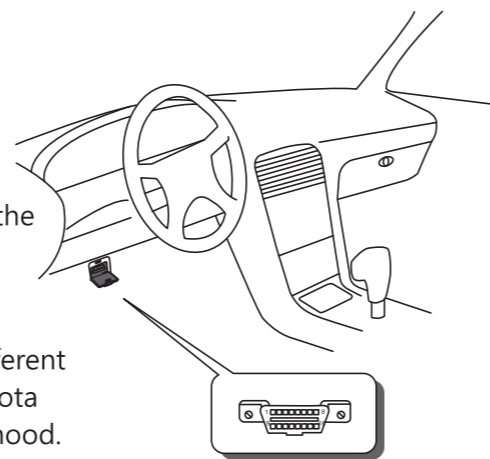


Step 2 Diagnostic Connection

1. Connect VEDIS 4sp to vehicle connector via AC-EC6 and corresponding adaptor.
2. After VEDIS 4sp powered on and ready, select [Diagnostic], then select vehicle make.

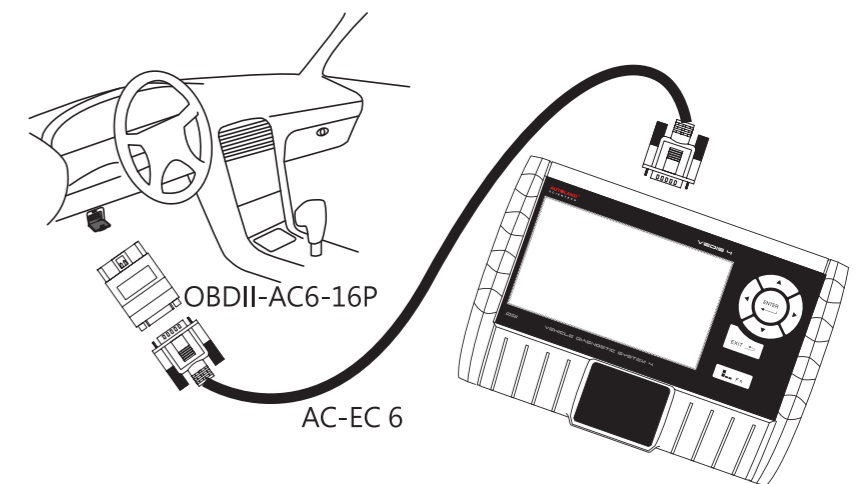


Software Download & Update


Software Update

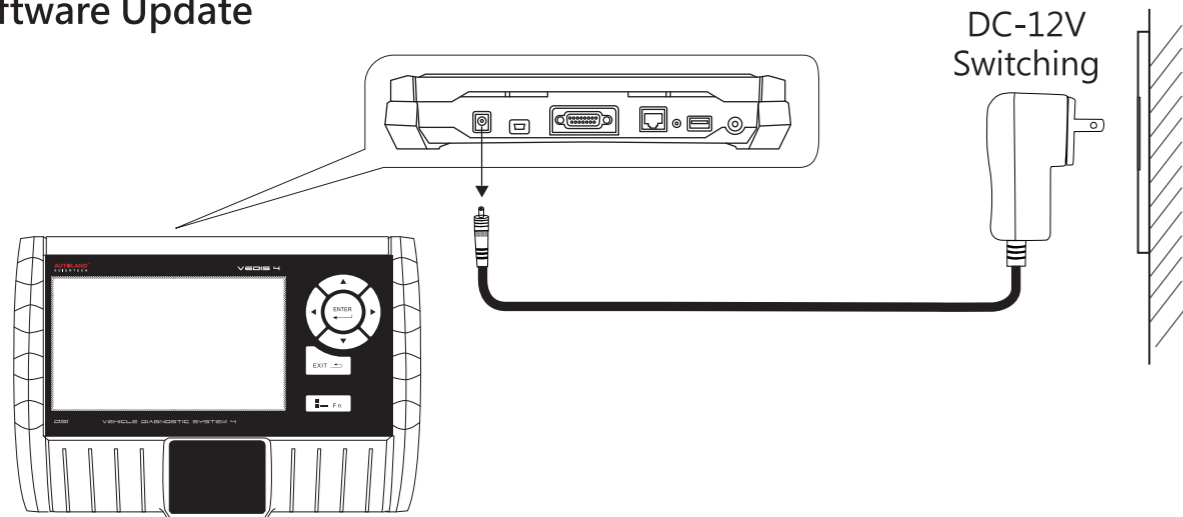


1. Select "Setup", then select "Wifi" connection.

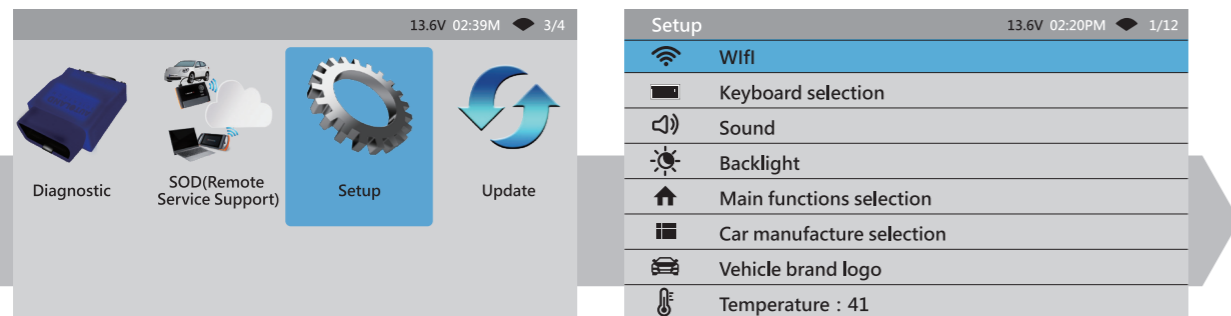


2. After Internet connection is complete, select "Update" at main page.

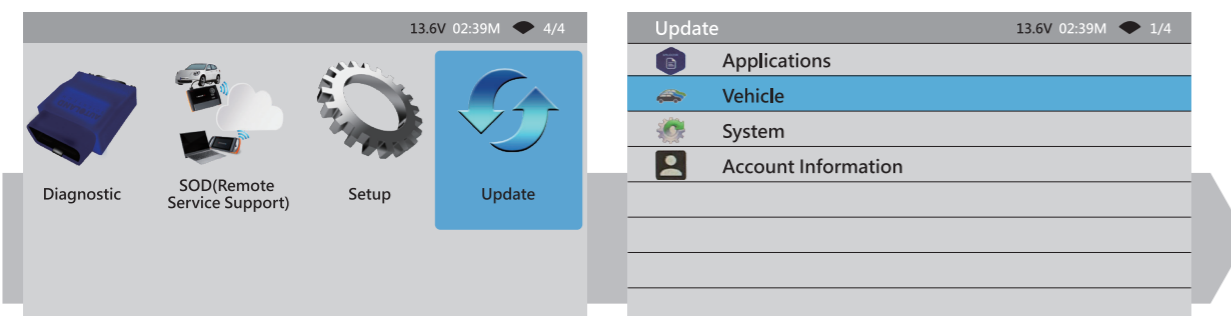

3. Entering Software Update, select [install all] or select [install] individually.

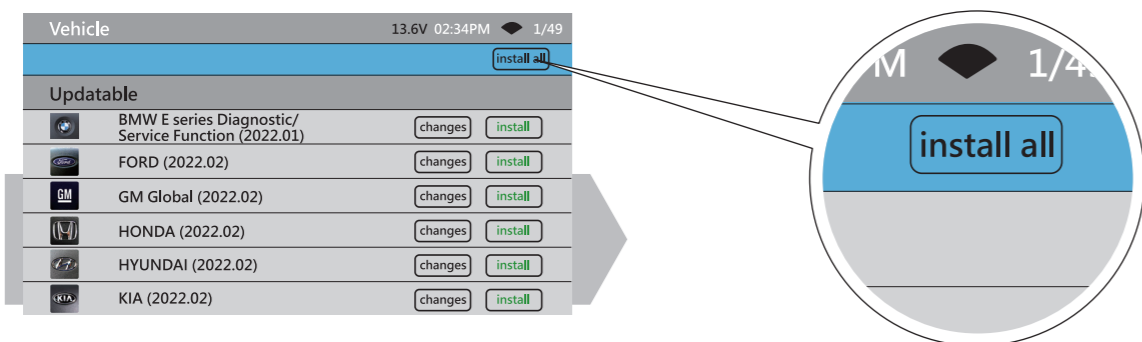


Function Key

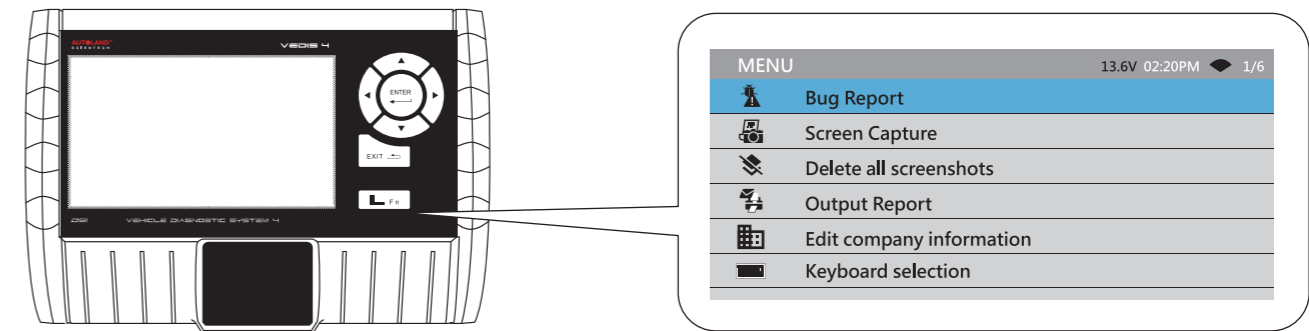


Output Report: Print, email, USB


Printing Function Using WiFi or wired Printer

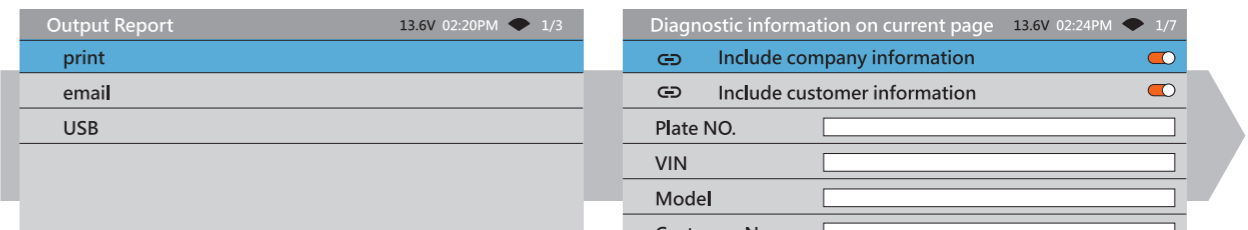

email Send PDF file via email

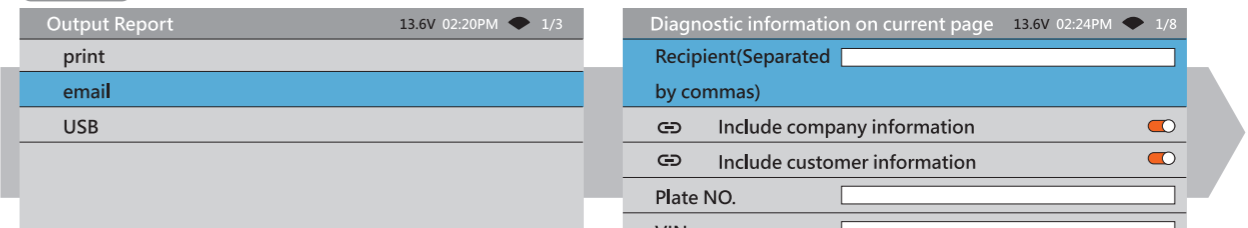

USB Storage device

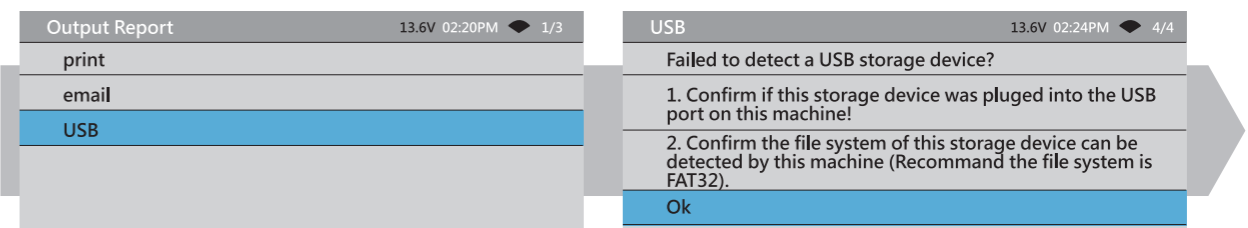

Keyboard selection

